


General CCP Wiring Diagram

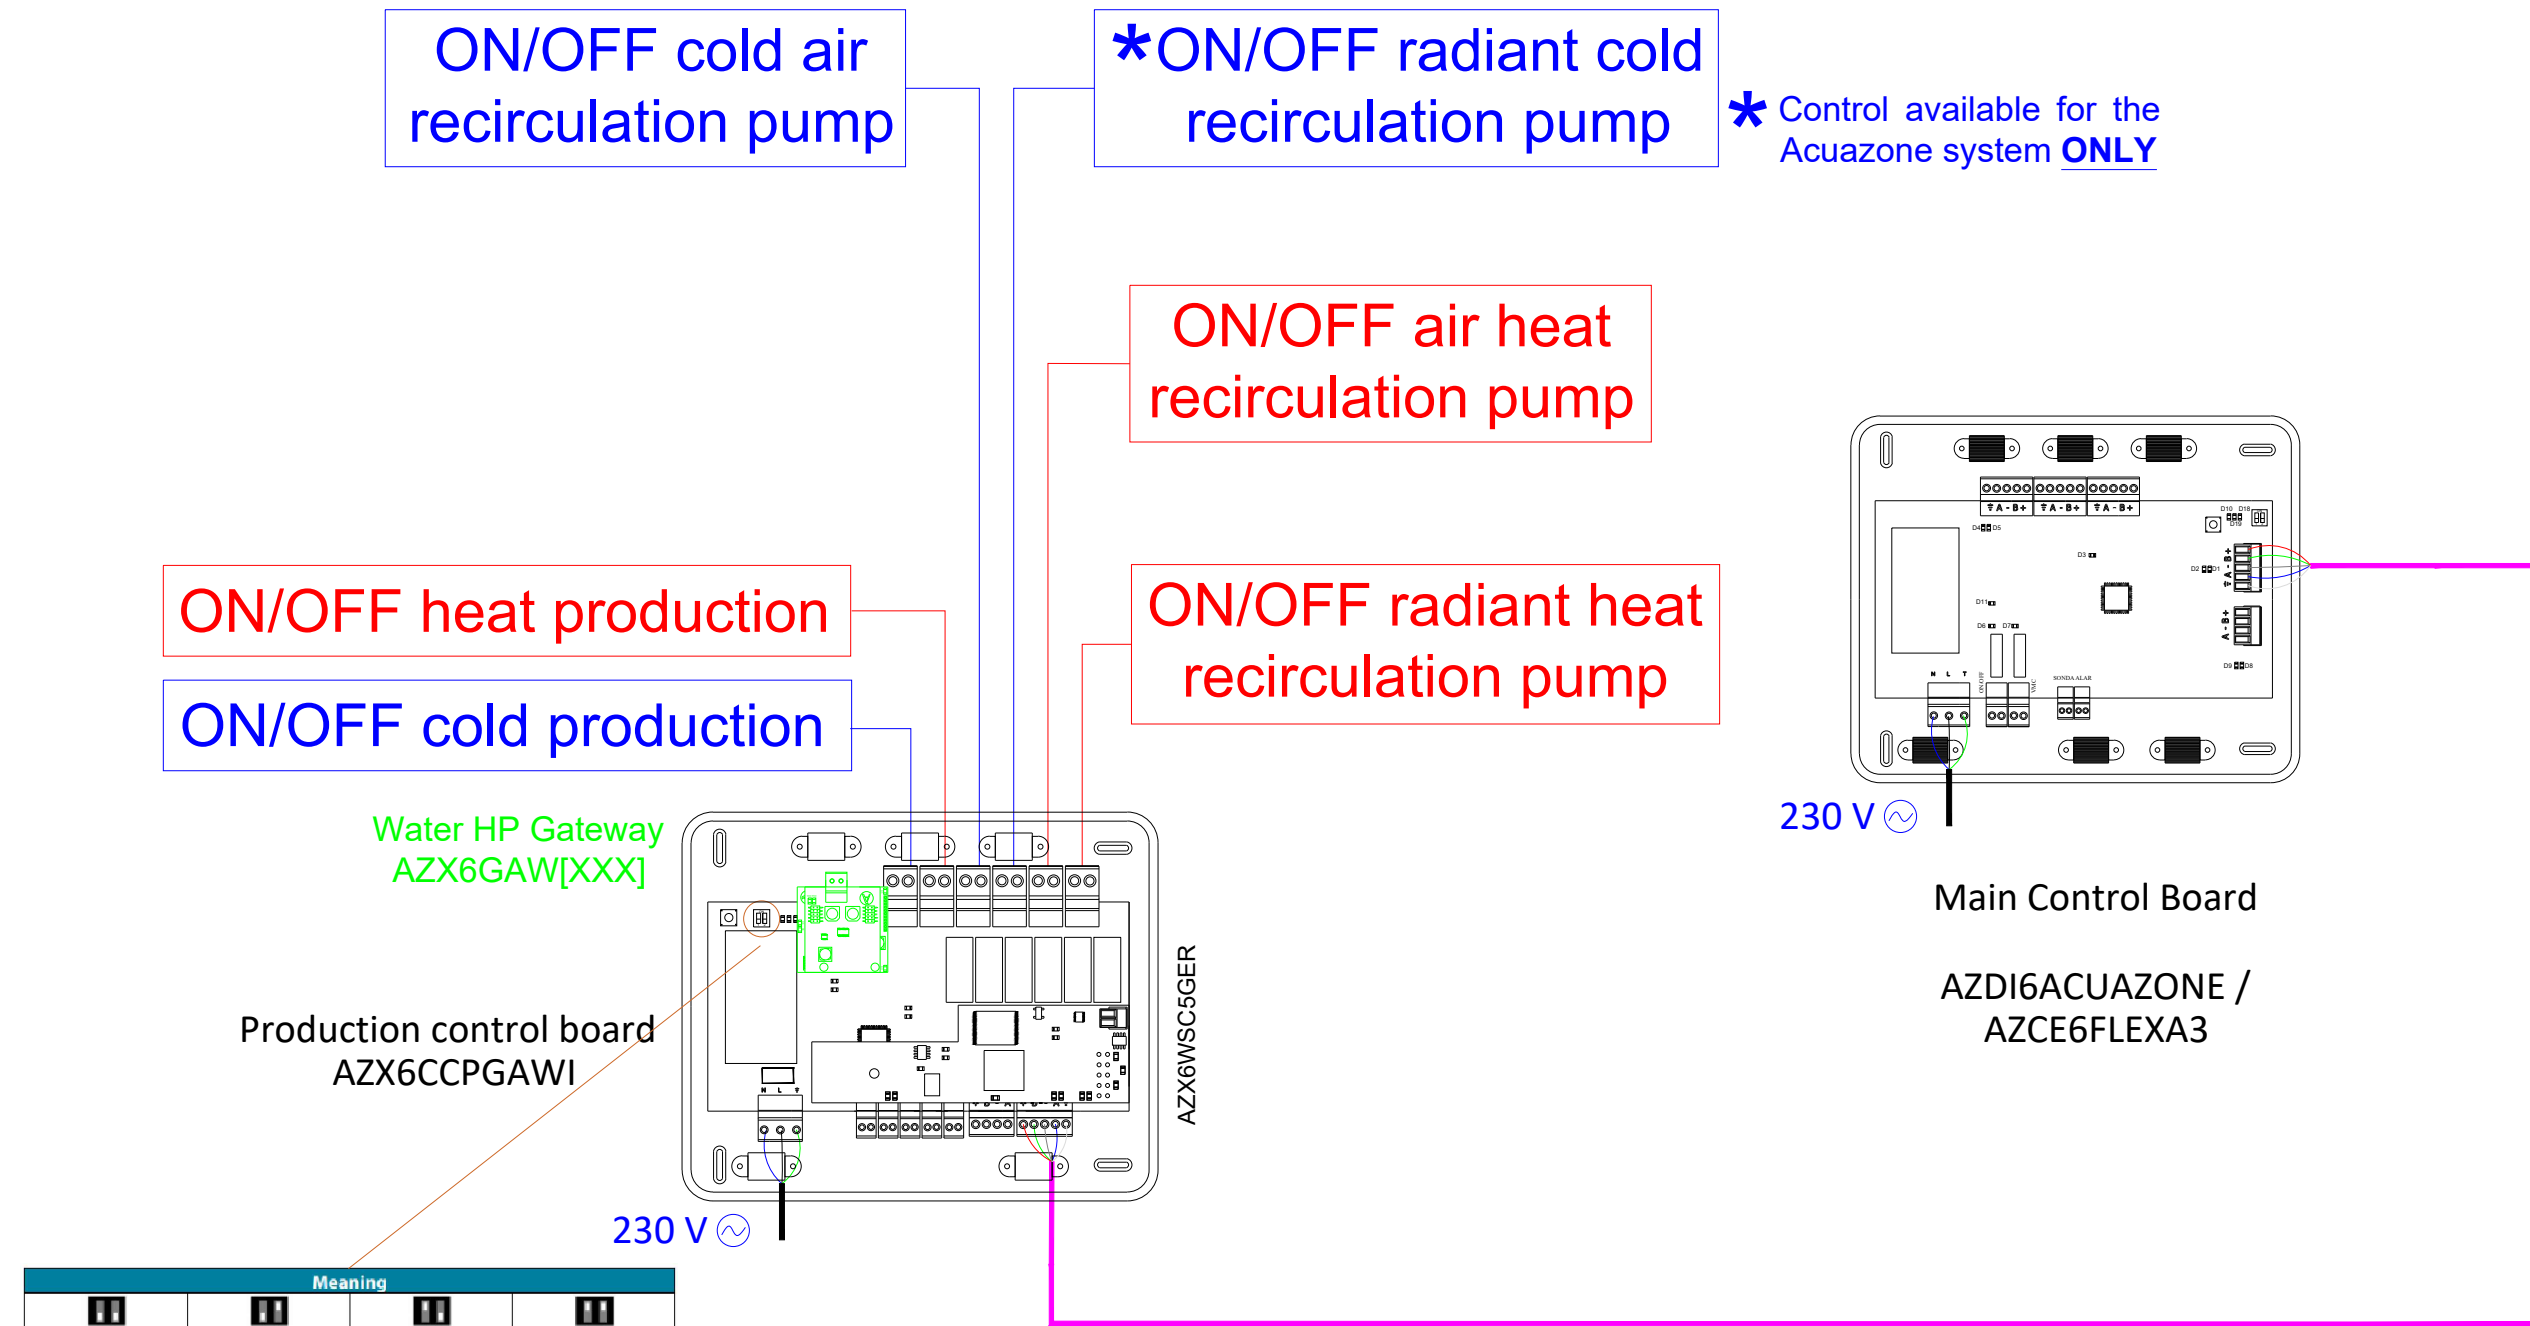

Meaning			
Aerothermal	2 pipes	3/4 pipes	RadianT

		Control Relays						
Mode	Demand	FRIO_Y	CALORB_W	AIRE_Y	RADIANTE_Y	AIRE_W	RADIANTE_W	
Stop	Off	--	--	--	--	--	--	
	Air	ON	--	ON	--	--	--	
Cooling mode	Radiant	ON	--	--	ON	--	--	
	Off	--	--	--	--	--	--	
Heating mode	Air	--	ON	--	--	ON	--	
	Radiant	--	ON	--	--	--	ON	
Dry	On	--	--	--	--	--	--	
	Off	--	--	--	--	--	--	
Ventilation	On	--	--	--	--	--	--	
	Off	--	--	--	--	--	--	

		Control Relays						
Mode	Demand	FRIO_Y	CALORB_W	AIRE_Y	RADIANTE_Y	AIRE_W	RADIANTE_W	
Stop	Off	--	--	--	--	--	--	
	Air	ON	--	ON	--	--	--	
Cooling mode	Radiant	ON	--	--	ON	--	--	
	Off	ON	--	--	--	--	--	
Heating mode	Air	--	ON	--	--	ON	--	
	Radiant	--	ON	--	--	--	ON	
Heating mode	On	ON	--	--	--	--	--	
	Off	--	--	--	--	--	--	
Ventilation	On	--	--	--	--	--	--	
	Off	--	--	--	--	--	--	

IMPORTANT NOTE: IT IS THE INSTALLER'S RESPONSIBILITY TO VERIFY THE INFORMATION SUPPLIED BY AIRZONE WITH THE EQUIPMENT MANUFACTURER REGARDING THE CONNECTION OF THE CCP (AZX6CCPGAWI) TO PRODUCTION.

For more information about CCP click [here](#)

