



CCP Wiring Diagram - RadianT365

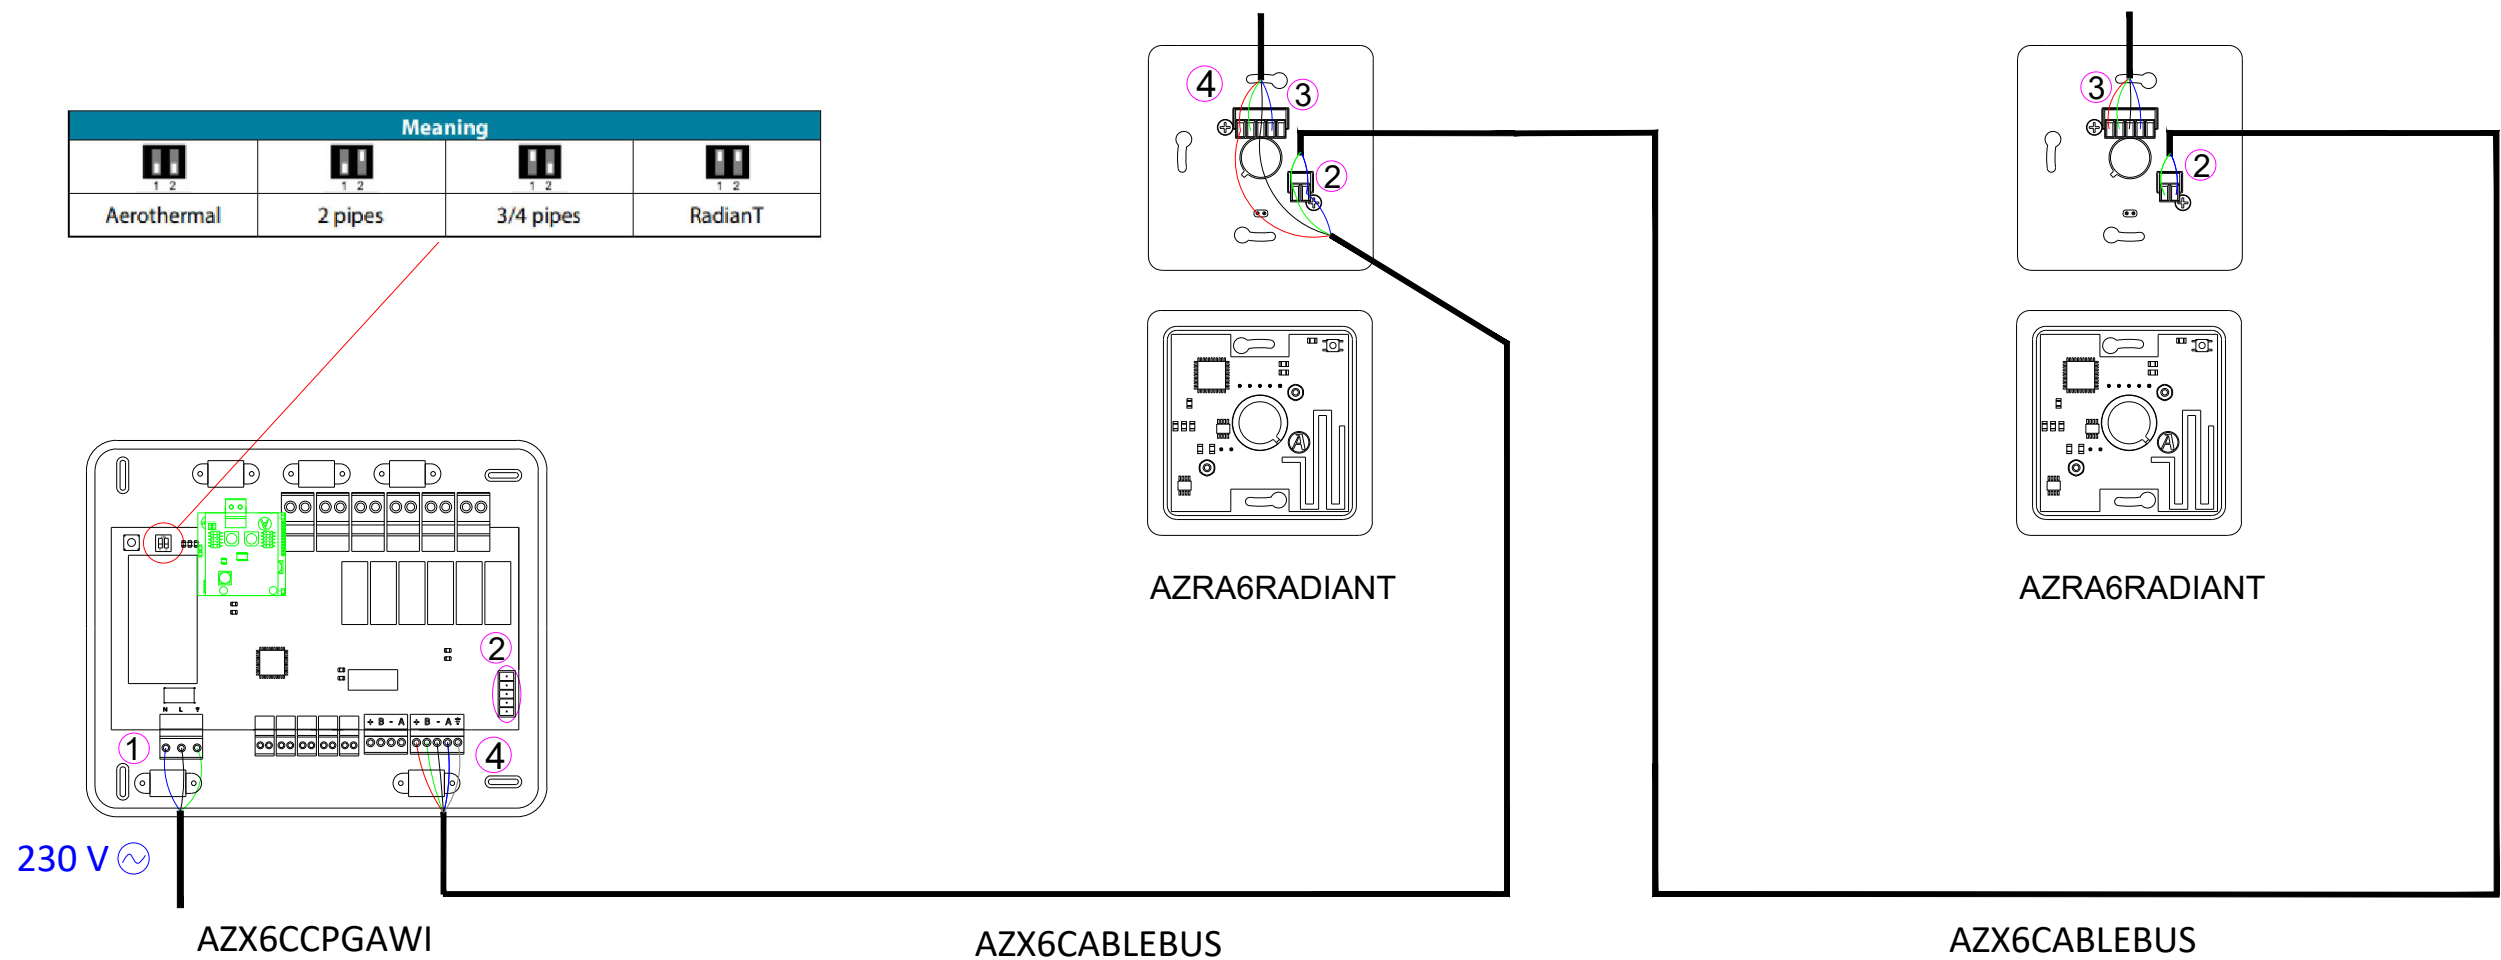

RadianT

Mode	Demand	Control Relays					
		FRIO_Y	CALORB_W	AIRE_Y	RADIANTE_Y	AIRE_W	RADIANTE_W
Stop	Off	--	--	--	--	--	--
Cooling mode	Radiant	ON	--	--	ON	--	--
	Off	--	--	--	--	--	--
Heating mode	Radiant	--	ON	--	--	--	ON
	Off	--	--	--	--	--	--
Dew warning active	On	ON	--	ON	--	--	--
	Off	ON	--	ON	--	--	--

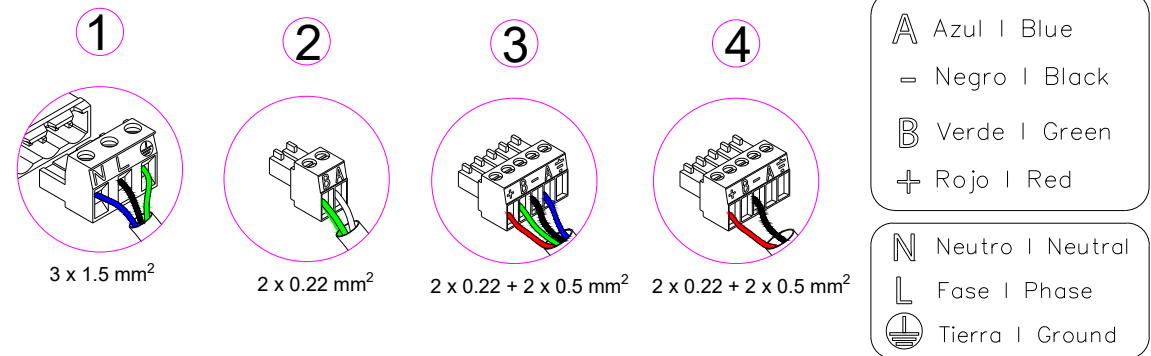

IMPORTANT NOTE: IT IS THE INSTALLER'S RESPONSIBILITY TO VERIFY THE INFORMATION SUPPLIED BY AIRZONE WITH THE EQUIPMENT MANUFACTURER REGARDING THE CONNECTION OF THE CCP (AZX6CCPGAWI) TO PRODUCTION.

For more information about CCP click [here](#)

